

10.1” HD Memory View Instruction Manual

Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Always use the eject buttons on the memory storage card slots to remove the storage cards.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit. To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

This device is designed for private use only!

Introduction:

Thank you for your purchase of the Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Features:

1. Support picture format: JPEG&BMP
2. Support audio format: Mp3&WMA
3. Support video format: MPEG1,MPEG2,MPEG4 (Divx4.0,Divx5.0, Xvid, AVI , M-JPEG, MOV, RMVB, WMV.
4. Support Memory card: SD/ MMC/MS
5. USB connection: USB 2.0 and Mini USB
6. Built-in 4GB memory for file storage
7. Support viewing pictures in thumbnail mode
8. Built-in clock, alarm and calendar with slideshow window.
9. Image-display mode: slideshow, preview, zoom, rotate function.
10. Adjustable slideshow speed and various kinds of transition slideshow
11. Copy and delete function
12. Adjustable brightness, contrast, saturation
13. Built-in stereo speaker (2x1W) and earphone jack
14. OSD language: English and other languages supported

Packaging Check List:

- | | |
|-----------------------------|---------|
| 1. 10.1 inch HD Memory View | 1 piece |
| 2. AC/DC adapter | 1 piece |
| 3. Remote control | 1 piece |
| 4. User manual | 1 piece |
| 5. USB to MINI USB cable | 1 piece |

 
Contents

1. Unpacking	4
2. Product Overview	4
3. Remote Control	5
4. Installing & Replacing the Battery	6
5. Getting Started	6
6. Operating Instruction	6
6.1 Card and USB	7
6.2 Main Menu	7
7. Photo Mode.....	7
8. Music Mode	9
9. Video Mode	10
10. Calendar	10
11. File.....	10
11.1. Copy/Delete Function.....	10
12. Setup	11
13. Connecting to External Equipment	12
14. Technical Specifications	12
15. Troubleshooting Guide	13

1. Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

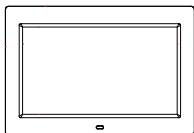

Main Unit



Power Adapter



Instruction Manual

 
 
 


Remote Control




USB to Mini USB cable

2. Product Overview

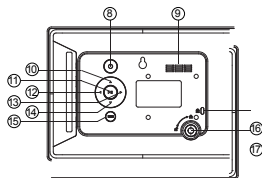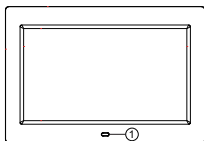

1. Remote window 2. SD/MMC/MS 3. Earphone jack 4. USB 5. MINI USB
6. DC in 7. Stand 8. On/Off 9. Speaker 10. Up 11. Ok 12. Right 13. Left
14. Down 15. Menu 16. Security lock hole 17. Stand Hole

 3. Remote Control

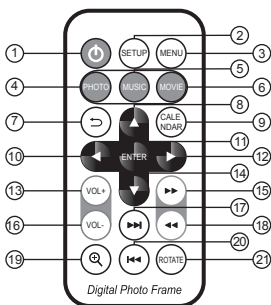

- ① **MENU** — Go directly to Main menu.
- ② **SETUP** — Go directly to Setup mode.
- ③ **POWER** — Switch On/Off.
- ④ **PHOTO** — Go directly to photo mode.
- ⑤ **MUSIC** — Go directly to music mode.
- ⑥ **MOVIE** — Go directly to movie mode.
- ⑦ **RETURN** — Return to upper page.
- ⑧ **▲** — Functional selection button from the bottom to the top cursor.
- ⑨ **CALENDAR** — Go directly to calendar mode.
- ⑩ **◀** — Functional selection button from right to left cursor.
- ⑪ **ENTER** — Press to confirm. Play/pause.
- ⑫ **▶** — Functional selection button from left to right cursor.
- ⑬ **VOL +** — Turn up the volume.
- ⑭ **▼** — Functional selection button from the top to the bottom cursor.
- ⑮ **▶▶** — To FF movie or music.
- ⑯ **VOL -** — Turn down the volume.
- ⑰ **▶▶|** — Go to choose the next file.
- ⑱ **◀◀** — To FB movie or music
- ⑲ **ZOOM** — In pause state of single picture mode, press to magnify picture display size.
- ⑳ **|◀◀** — Go to choose the pre file
- ㉑ **ROTATE** — In pause state of single picture mode, press to revolve the picture 90° in clockwise every time

4. Installing & Replacing the Battery

Installing & Replacing the Battery

If you need a new battery, please refer to the following.

Place the upside of the remote control down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive "+" side facing you. Reinsert the tray.



5. Getting Started

- Plug one end of the included AC adapter into a standard 110-240V AC electrical outlet and the other end into the DC in of the frame.
- Remove the protective film covering the LCD.
- Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inside. Please refer to "Installing & Replacing Battery" if you need a new battery.
- Power on the unit by pressing the Power button on the remote control.

6. Operating Instruction



 
After turning on the unit, it will show the startup picture, then pictures will automatically play from the built-in memory when there is no card insert. If there is a card or USB device, it will slideshow pictures from the card or USB.

6.1 Card and USB



Press **RETURN** 3 times to enter the card select interface, you can choose the source device: built in memory, USB or SD/SDHC card.


6.2 Main Menu

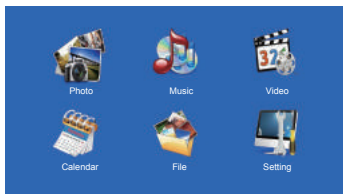

It supports SD/SDHC/MMC/MS and USB 2.0. After inserting a card or USB device, slideshow will play automatically, then press **RETURN** twice to access to main menu.

Note: Make sure there are supported files in the Card or USB device.

 7. Photo Mode

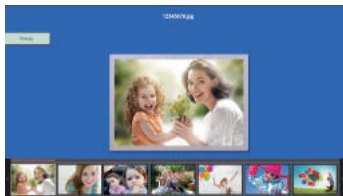

In the main menu, highlight **Photo**, press **OK** to start slideshow, Press **RETURN** to enter to thumbnail mode.



During slideshow, press **OK** to enter the photo bar, select with ◀▶, press **OK** to operate.

The functions on the bar are as follows from left to right:

 
- a. - Rotate
- b. - Zoom
- c. - Previous
- d. - Next
- e. - Start slideshow from current picture
- f. - Delete current picture
- g. - Copy function
- h. - Show information of current picture
- i. - Return to thumbnail mode



You can set start slideshow pictures in single window or multi screen mode. Change slide mode as follows: press **SETUP** to select Photo Setup, then select Slide Mode, select Single Window /Two Windows/ Three Windows/ Four Windows with ▼▲, press **OK** to confirm.

Note: The slide show is with background music if there is any music files, you can enter the Photo menu by pressing the Setup button to set the background music.

Copy and Delete function

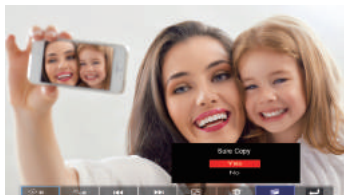


In thumbnail mode of Card/USB, use ◀▶ to highlight the picture you want to copy to built-in memory, press **ENTER** to enter Copy interface, use ◀▶ to select Copy to internal, press **OK** to confirm.


In thumbnail mode of Built-in memory, use ◀▶ to highlight the picture you want to delete, press **COPY DEL** to enter Delete interface, use ◀▶ to select Delete files, press **OK** to confirm.

Note: Support Copy files from Card/USB to memory and delete files in the built in memory and cards.

 8. Music Mode

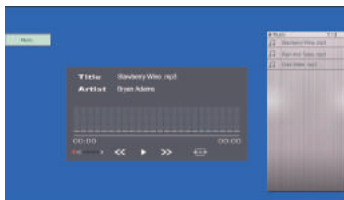

 In the main menu, Highlight **Music**, press **OK** to access the music mode, or press **MUSIC** directly on the remote control, The first music will play automatically. Press **RETURN** to enter the playlist, then Press ▼▲ to select the music from the playlist, press **OK** to confirm. Press **VOL +/-** to turn up/ down the volume.

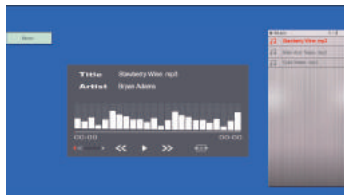


During the music playing ,there is music information bar, select with ▼▲, press **OK** to operate.

The functions on the bar are as follows from left to right:

a. ◀ VOL b. ▶ VOL+ c. << Fast Backward d. ▶/|| Play/ Pause e. >> Fast Forward
f. Play Mode Setting :

1. [Single] Single,
2. [Single Repeat] Single repeat,
3. [Circular] Circular,
4. [Random] Random

 9. Video Mode

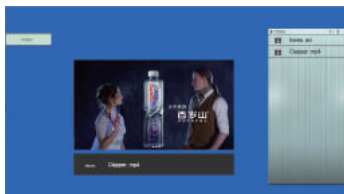


In the main menu, highlight **Video**, press **OK** to access the video mode, or press **VIDEO** directly on the remote control to play the first Video. Press **RETURN** to enter the playlist, then Press **▼▲** to select the Video from the playlist, press **OK** to confirm. Press **VOL+/-** to turn up/ down the volume. Press **▶▶** to fast backward and Press **◀◀** to Fast Forward.

10. Calendar




In the main menu, highlight **Calendar**, press **OK** to enter, use **◀▶** to show the last / next month of the calendar, use **▲▼** to scroll the previous/ next year of the calendar.

 11. File

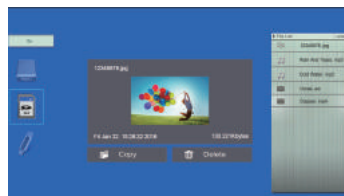


In the main menu, highlight **File**, then press **OK** to access to file interface. In this mode, you can browse all the picture files and folders in the memory card or the built-in memory.

 11.1.Copy/Delete Function

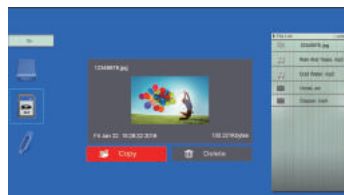

In file interface, use **▼▲** to select the file you want to Copy or Delete, Copy/Delete interface is appeared by the side, use **◀▶** to select Copy or Delete, press **OK** to confirm. Press **OK** again to continue.

 12.Setup

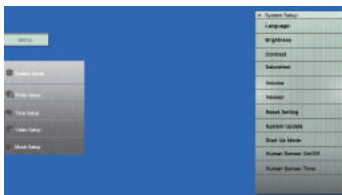

In the main menu, Highlight **Setting** from main menu, press **OK** to access to Setup interface. Use **▼▲** to select the item you want to set up. Press **OK** to show the sub menu, select items with **◀▶**, then press **OK** to confirm.

12.1 System Setup

- 12.1.1 Language: English and other language for selection, press **OK** to confirm.
- 12.1.2 Brightness: Use **◀▶** to select from 01 (lowest) to 10 (highest), press **OK** to confirm.
- 12.1.3 Contrast: Use **◀▶** to select from 01 (lowest) to 10 (highest), press **OK** to confirm.
- 12.1.4 Saturation: Use **◀▶** to select from 01 (lowest) to 10 (highest), press **OK** to confirm.
- 12.1.5 Volume: Use **◀▶** to select from 01 (lowest) to 10 (highest), press **OK** to confirm.
- 12.1.6 Version: Check version, press **OK** to confirm.
- 12.1.7 Reset Setting: Press **OK** to confirm, press **OK** to confirm.
- 12.1.8 System Upgrade:
Press **OK** to Start FW upgrade.(Need to use Firmware)
- 12.1.9 Start Up mode: Video+photo, Photo+video, Video, Calendar, Main menu, Photo, Music, press **OK** to confirm.

12.2 Photo Setup

- 12.2.1 Background Music: Press **▼▲** to choose on/off, press **OK** to confirm.
- 12.2.2 Display Ratio: Fit to screen, Crop to fill, full screen, press **OK** to confirm.
- 12.2.3 Slideshow Speed: 3/5/10/15 /30 seconds, 1/15 minutes, press **OK** to confirm.
- 12.2.4 Slideshow effect: Circle rotation, Open horizontal, Heart expand, Move out, Zoom in Fade in, Zoom out, Random, press **OK** to confirm.
- 12.2.5 Slide Mode: Single /Two/Three /Four windows, press **OK** to confirm.
- 12.2.6 Photo Play Sequence: Sequence , Random, press **OK** to confirm.

12.3 Time Setup

- 12.3.1 Date: Press **OK**, then use **▼▲** to select setup items, then use **◀▶** to set Year, Month, Day, press **OK** to confirm.
- 12.3.2 Set Time format: 12/24 hour, Press **◀▶** to set, use **OK** to confirm.
- 12.3.3 Clock: Press **OK**, press **▼▲** to select setup items, then use **◀▶** to set Hour, Min, Second, press **OK** to confirm.
- 12.3.4 Alarm Status: press **◀▶** to choose on/off, press **OK** to confirm.
- 12.3.5 Alarm Time: Press **OK**, press **▼▲** to select setup items, then use **◀▶** To set Hour, Min, press **OK** to confirm.
- 12.3.6 Alarm Tone: press **▼▲** to choose Alarm 1 2 or 3, press **OK** to confirm.
- 12.3.7 Alarm Frequency: Once, Everyday, Mon. to Fri., Weekend, press **OK** to confirm.
- 12.3.8 Auto Power On: Press **OK**, then use **▼▲** to select setup items, then use **◀▶** to set Hour, Min, ON/OFF, press **OK** to confirm.

12.3.9 Auto Power Off: Press **OK**, then use ▼▲ to select setup items, then use to set Hour, Min, ON/OFF, press **OK** to confirm.

12.3.10 Auto Power Freq: Once, Everyday, Mon. to Fri., Weekend, press **OK** to confirm.

13. Connecting to External Equipment

You can connect the unit to external equipment by using long USB cable:

A. Please turn on the digital photo frame, then connect it with your computer by using long USB cable

B. The unit will be automatically detected and it will display "USB Device Connected" information, when you are using Windows 2000/XP, then you can copy file between built-in memory and the digital photo frame.

Then you need to restart the digital photo frame when you finished the copy/delete operation.



IMPORTANT: Never disconnect the USB cable while files are transferring. Doing so may damage your DPF.

14. Technical Specifications

- Adapter:
- Input: AC 100-240V 50/60HZ 500mA
- Output: DC 5V/2A
- Picture Format: JPEG & BMP
- Video Format: MPEG1/2/4 (Divx4.0, Divx5.0, Xvid), AVI, M-JPEG, MOV, RMVB, WMV
- Memory card: SD/ MMC/MS
- USB connection: USB 2.0 & Mini USB
- Screen Parameter: 1280*800 IPS
- Screen Size : 10.1 inch
- Aspect Ratio: 16: 10
- Contrast: 500:1
- Brightness: 200 cd/m2
- Response Time: 20ms

15. Troubleshooting Guide

If you have problems with your player, please consult both this guide and manual. If you need further assistance, please contact Technical Support.

- **No power:**

Please check whether the plug is inserted correctly.

- **Remote control no function:**

Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.

- **Can not read the CARD or USB:**

Please confirm whether there is storage in the card or USB device. Empty devices cannot be read.

- **Can not play the file:**

Please confirm if the file format is compatible with the player.

- **Display too bright or too dark:**

Please adjust the brightness or contrast in the setup menu.

- **The color is light or no color:**

Please adjust the color and contrast setup.

- **No sound:**

Please check whether the volume is correct and the player is not in Mute mode.