

Cautions

Precautions and maintenance

- For indoor use only
- To avoid risk of fire or electric shock, do not expose the unit to moisture or condensation.
- To avoid overheating, do not block the ventilation holes on the back of the Digital Photo Frame.
- Keep the Digital Photo Frame out of direct sunlight.
- Always use the eject buttons on the memory storage card slots to remove the storage cards.
- Do not dismantle the Digital Photo Frame. There is a risk of electric shock and there are no user-serviceable parts inside. Dismantling the Digital Photo Frame will void your warranty.

Cleaning the LCD Screen

- Treat the screen carefully. Because the screen of the Digital Photo Frame is made of glass and it would easily be broken or scratched.
- If fingerprints or dust accumulate on the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- Moisten the cleaning cloth with the cleaning solution and apply the cloth to the screen.

WARNING:

Please power off the unit before inserting or removing a card or USB device.

Failure to do so may cause damage to the card/USB and the unit.

To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

Introduction:

Thank you for your purchase of the Digital Photo Frame. It is designed to allow quick and easy view of photos taken from your digital camera, mobile phone, or from a memory storage card. Please read this User Manual carefully to learn the correct way to use the Digital Photo Frame.

Features:

1. Support Picture format: JPEG.
2. Support audio formats: Mp3& WMA
3. Support video formats: MPEG1, MPEG2, MPEG4, AVI and M-JPEG
4. Support Memory card: SD/MS/MMC
5. USB connection: USB host
6. Support viewing pictures in thumbnail mode
7. Support auto Slideshow with background music
8. Auto Slideshow when insert Memory Card
9. Built-in 8M memory to store about 3pcs pictures
10. Image-display mode: slideshow, preview, zoom, rotate function.
11. Adjustable slideshow speed and various transition slideshow effects
12. Built-in Clock and calendar with slideshow & background music
13. Schedule auto on/off, copy & delete function
14. Adjustable brightness, contrast, saturation
15. Slideshow mode: single window, four windows and tripe windows.
16. OSD language: English

Packaging Check List:

 
- | | |
|-------------------------------|---------|
| 1. 7 inch digital photo frame | 1 piece |
| 2. User manual | 1 piece |
| 3. AC/DC adapter | 1 piece |
| 4. Remote control | 1 piece |

CONTENTS

1 Product Diagram.....	4
2. Installing & Replacing the Battery.....	5
3. Getting Started.....	5
4. Operating Instruction.....	6
4.1 Card and USB.....	6
4.2 Picture Mode.....	6
4.3. Music Mode.....	7
4.4 Video Mode.....	8
5. File.....	8
6. Calendar.....	9
7. Setup.....	9
8. Stand Instruction.....	10
9. Technical Specifications.....	11
10. Troubleshooting Guide.....	11

1 Product Diagram

1.1 Remote Control

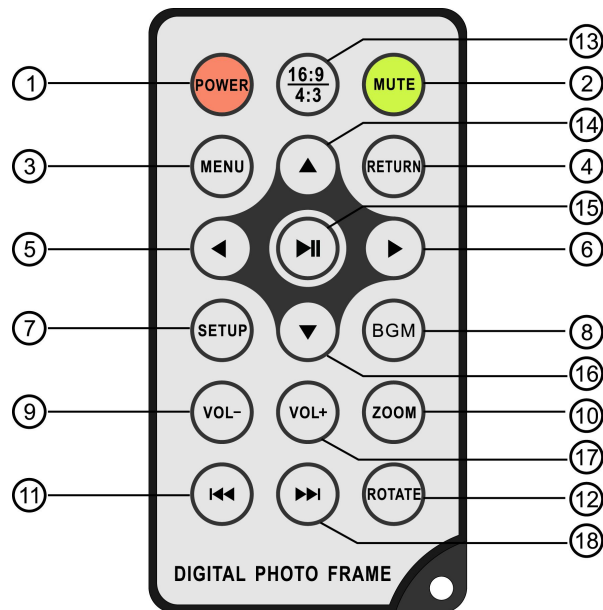

1. **POWER**—Power On/Off
2. **MUTE** —Press Mute button to silence the voice temporarily.
3. **MENU**—Press to enter “Info Bar” when playing pictures or videos, or show the menu for copy / delete function in file interface
4. **RETURN**-- Return to the previous page
5. ◀ — Functional selection button from right to left cursor
6. ▶—Functional selection button from left to right cursor
7. **SETUP**—Press setup to enter the setup page directly
8. **BGM**-- In slideshow mode, press this button to add background music
9. **VOL -** —Turn down the volume
10. **ZOOM**— In single picture mode, press to magnify picture display size
11. ◀◀ —Move back to previous picture, music or video file
12. **ROTATE**— In single picture mode, press to revolve the picture 90° in clockwise every time
13. **DISPLAY MODE** —In the picture mode; press this button to select the picture display mode 16:9 or 4:3 directly
14. ▲— Functional selection button from the bottom to the top cursor.
15. ▶|| — **Play/pause**: In the playing mode, press this button, it will pause; repress this button, it will play again.
16. ▼— Functional selection button from the top to the bottom cursor.
17. **VOL +** —Turn up the volume.
18. ▶▶ — Move forward to next picture, music or video file

 
1.2 Top Buttons

- 1.Power On/Off
- 2.Light-Play/pause: used as turn on/off light after holding on for 2seconds.
- 3.Menu
- 4.OK
- 5.Right Arrow
- 6.Left Arrow
- 7.Down Arrow
- 8.Up Arrow



1.3 Right Side of Frame

- 1.SD/MS/MMC
- 2.USB
- 3.Earphone
- 4.DC (Power Input)

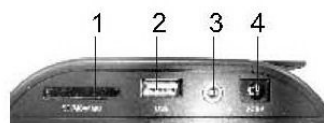

2. Installing & Replacing the Battery

Place the upside of the remote control down, press down on the ridged area of the battery cover and pull towards you to remove the tray. Place one CR2025 lithium button-cell battery on the tray with the positive "+" side facing you. Reinsert the tray.



 
3. Getting Started

- 3.1 Extend the digital photo frame bracket on the back of the frame to the widest position for greatest stability, and then plug one end of the included AC adapter into a standard 110-240V AC electrical outlet and the other end into the right side the frame.

Note: There are different positions for the digital photo frame stand. Please refer to "Stand Instruction".

- 3.2. Remove the protective film covering the LCD.
- 3.3. Remove the plastic battery insulator from the battery compartment and make sure the remote control has a battery inside. Please refer to "Installing & Replacing Battery" if you need a new battery.
- 3.4. Power on the unit by pressing the Power button on the remote control.

4. Operating Instruction

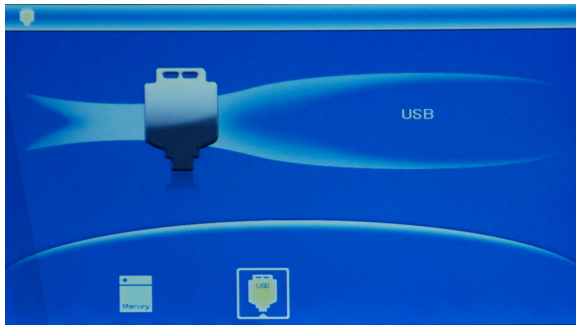

After turning on the unit, slideshow will play automatically

4.1 Card and USB



It supports SD/SDHC/MS/MMC and USB 2.0. After inserting a card or USB device, slideshow will play automatically, and then you can press **RETURN** twice to access to photo, music, video, file, calendar and setup (look at the diagram). Press **⏮** to confirm the selection

 
- Note:** 1) Make sure there are supported picture, music and video files in the Card or USB device.
- 2) If there are supported picture and music files in the Card or USB Device, slideshow will play automatically with background music.

4.2 Picture Mode




Press **RETURN** to choose "**MEMORY CARD**" in the main menu. Highlight **Photo**, press **⏮** to access to the six-picture mode, use **▲▼◀▶** to choose the picture, press **OK** to play the picture in single window.

Copy & Delete function

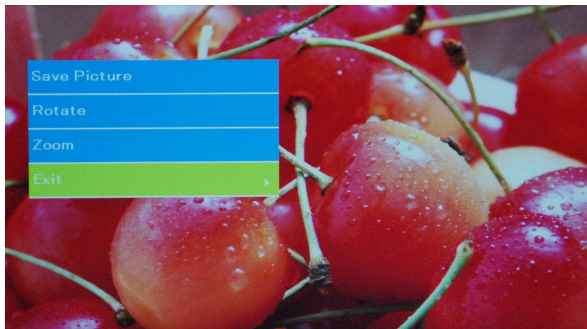

 In single-picture mode, use ◀ ▶ to select the picture you want to copy to the built-in memory, then press **MENU** to enter copy interface, press ⏪ to confirm.

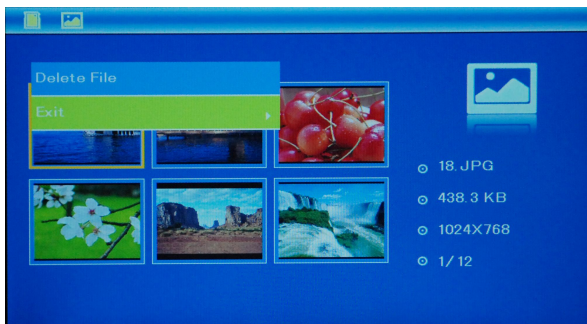


In six-picture mode, use ◀ ▶ to select the picture you want to delete in the built-in memory, then press **MENU** to enter delete interface, press ⏪ to confirm.



Press **SLIDE SHOW** or **BGM** to start slideshow, and then press **MENU**, there will crop up a menu (single window/ four windows/tripe windows), use ▲ ▼ to choose the slide mode, then press ⏪ to display the pictures in the selected slide mode before.


4.3 Music Mode

 Press **RETURN** to choose "MEMORY CARD "in the main menu. Choose **Music**, then press ⏪ to enter the music interface. Press ▲ ▼ to select.

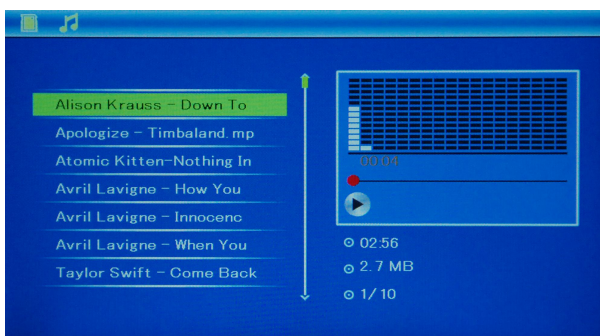


When you enter the music interface, press ▲ ▼ to select the music you want to play, and press ⏪ to operate. Press **VOL+/-** to turn up/ down the volume.

 Delete function

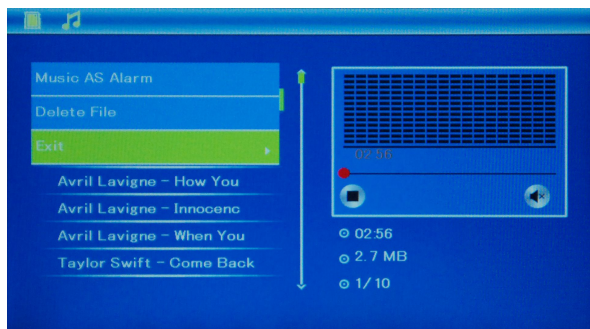


Use ◀▶ to select the music you want to delete, then press **MENU** to enter delete interface, press ⏮ to confirm.

 4.4 Video Mode

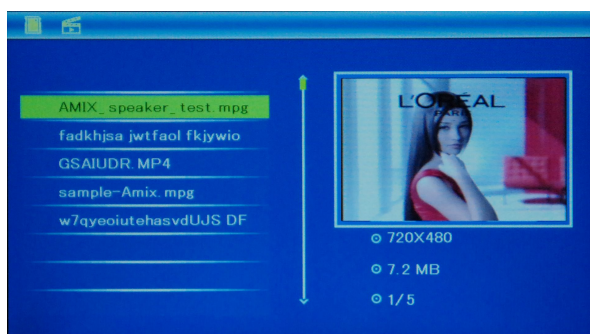

When you enter the video interface, press ▲▼ to select the video you want to play, and press ⏮ to operate. Press **VOL+/-** to turn up/ down the volume.

 Delete function

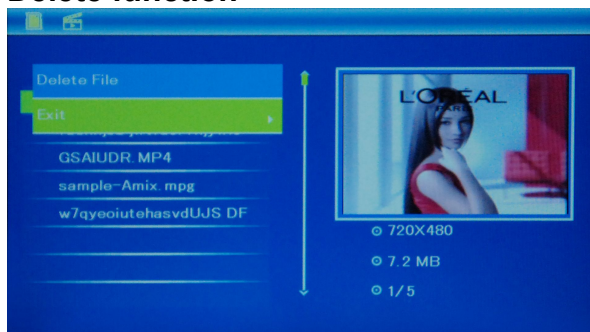

Use ◀▶ to select the video you want to delete, then press **MENU** to enter delete interface, press ⏮ to confirm.

5. File



Press **RETURN** to choose "**MEMORY CARD**" in the main menu. Press **File**, then press ⏮ to access to file interface. You can browse all the files in the memory card in this mode, and copy picture files to built-in memory or delete picture files in the built-in memory.

Delete



Use ▲▼ to select the file you want to delete, then press **MENU** to enter delete interface, press ◀◀ to confirm.

 
6. Calendar



Select **Calendar** from the main menu, press **OK** to enter, use ▲▼ to show the next/previous year of the calendar, use ◀▶ to show the last / next month of the calendar. In this mode, press ◀◀ to add background music.

NOTE: When you enter the picture, music, video, file or calendar interface, just press **CARD SELECT** on the remote control to choose memory card quickly if there are two or more cards connected with the unit.

7. Setup

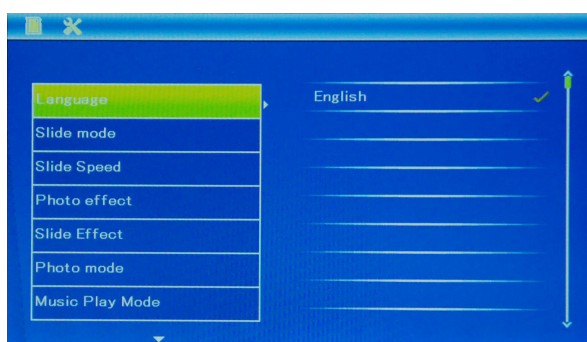

Press **Setup** from the main menu, and then press ◀◀ to access to setup interface. Use ▲▼ to select the item you want to set up. Press ▶ to show the sub menu, select with ▲▼, then press ◀◀ to confirm.

7.1 Language: English

7.2 Slide mode: single window, four windows and triple windows

7.3 Slide speed: 3/5/15/30seconds, 1/5/15/30minutes and 1hour

7.4 Photo effect: color, mono, sepia

7.5 Slide effect: Random, Windows,Jalousie,Fade,Insert,Reel,Brick,3DFloat,

Release,3DMix,Comb,3DCircle,3DCube

7.6 photo mode: Auto fit, optical, full

7.7 Music repeat: Single Repeat, Circular, No repeat, Single

7.8 Video repeat: Original, Screen

7.9 Display

Contrast: Use ▲▼ to select between 00 (lowest) and 40 (highest).

Brightness: Use ▲▼ to select between 00(lowest) and 40 (highest).

Saturation: Use ▲▼ to select a point between 00 (lowest) and 40 (highest).

Tint: Use ▲▼ to select from 00 to 40

7.10 Clock Setup

Set time/date: Press◀▶, ▲▼ to set, use ⏮ to confirm, press **RETURN** to return

Set time format: 12/24, Press ▲▼ to set, use ⏮ to confirm

Set Alarm: Press⏮, use ▲▼ to choose on/off, then Press ⏮ again, and use ▲▼ to set the alarm time.

7.11 Auto Power On/Off: Press **OK**, choose setup items with ▲▼ as follows: Hour, Minute, Status, press **OK**, use◀▶to set, Press **OK** to confirm.

7.12 Format built-in memory: Press **OK**, choose No/ Yes with ▲▼, Press **OK** to confirm

7.13 Reset setting: Press **OK** enter, use ▲▼to select or unselect to reset all settings to default values, press **OK** to confirm.

7.14 Exit: Press to exit setup interface

8. Stand Instruction

Extend the bracket from the slot of the digital photo frame, rotate the bracket until it is locked in place ,and then revolve the bracket to choose standing horizontally or vertically. Please refer to the illustration shown below.



9. Technical Specifications

- **Adapter:**Input: AC 100-240V 50/60HZ 300mA
Output: DC 5V/1.5A
- **Picture Format:**JPEG
- **Audio Format:** Mp3& WMA
- **Video formats:** MPEG1 , MPEG2, MPEG4,AVI and M-JPEG
- **Memory Cards:**SD/SDHC/MS/MMC
- **USB:**USB Host(high speed 2.0connected with the long USB Cable);MINI USB
- **Screen Parameter:**
 - Screen Size: 7 inch TFT
 - Resolution: 800x480 Pixel
 - Contrast: 300:1
 - Aspect Ratio: 16:9
 - Brightness: 300cd/m2
 - Response Time: 20ms
 - Viewing Angle: 60°(left/right/vertical), 40°(horizontal)
 - Working Temperature: 0℃~40℃, Humidity: 10-85%

10.Troubleshooting Guide

If you are having problems with your player, please consult both this guide and manual. If you need further assistance, please contact Technical Support.

- **No power:**
Please check whether the plug is inserted correctly.
- **Remote control no function:**
Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.
- **Can not read the CARD or USB:**
Please confirm whether there is storage in the card or USB device.
Empty devices cannot be read.
- **Can not play the file:**
Please confirm if the file format is compatible with the player.
- **Display too bright or too dark:**
Please adjust the brightness or contrast in the setup menu.
- **The color is light or no color:**
Please adjust the color and contrast setup.
- **No sound:**
Please check whether the volume is correct and the player is not in Mute mode.