

# 7" Slimline Instruction Manual



# Contents

---

<b>Safety Warnings</b> .....	<b>3</b>
<b>Unpacking</b> .....	<b>5</b>
<b>Product Overview</b> .....	<b>5</b>
<b>Remote Control</b> .....	<b>6</b>
<b>Preparations</b> .....	<b>7</b>
<b>Photo Play</b> .....	<b>8</b>
<b>Video Play</b> .....	<b>9</b>
<b>Music Play</b> .....	<b>9</b>
<b>Calendar</b> .....	<b>10</b>
<b>File Manager</b> .....	<b>10</b>
<b>Setting</b> .....	<b>11</b>
<b>Maintenance</b> .....	<b>13</b>
<b>Hints and Tips</b> .....	<b>13</b>
<b>Specifications</b> .....	<b>14</b>

# Safety Warnings

---

Read all the instructions carefully before using the unit and keep them for future reference. Retain the manual. If you pass the unit onto a third party make sure to include this manual. Check that the voltage marked on the rating label matches your mains voltage.

## Damage

- Please inspect the unit for damage after unpacking.
- Do not continue to operate the unit if you are in any doubt about it
- Working normally, or if it is damaged in any way-switch off, unplug from the mains socket and consult your dealer.

## Location of Unit

- The unit must be placed on a flat stable surface and not subjected to vibrations.
- Do not place the unit on sloped or unstable surfaces as the unit may fall off or tip over.
- The mains socket must be located near the unit and should be easily accessible.
- This unit is designed for indoor use only.

## Temperature

- Avoid extreme degrees of temperature, either hot or cold. Place the unit well away from heat sources such as radiators or gas/electric fires.
- Avoid exposure to direct sunlight and other sources of heat.

## Naked Flames

- Never place any type of candle or naked flame on the top of or near the unit.

## Moisture

- To reduce the risk of fire, electric shock or product damage, do not expose this unit to rain, moisture, dripping or splashing. No objects filled with liquids, such as vases, should be placed on the unit.
- If you spill any liquid into the unit, it can cause serious damage. Switch off at the mains immediately. Withdraw the mains plug and consult your it dealer. it dealer.

## Mains Adapter

- The mains adapter will continue to draw electricity from the mains supply when plugged in the mains socket. In the interests of safety and to avoid unnecessary energy consumption,

never leave the adapter plugged in the mains socket while unattended for long periods of time. Disconnect the adapter from the power supply.

- Make sure the unit or unit stand is not resting on top of the mains adapter cable, as the weight of the unit may damage the cable and create a safety hazard.

## **Interference**

- Do not place the unit on or near appliances which may cause electromagnetic interference. If you do, it may adversely affect the working performance of the unit, and cause a distorted sound.
- Supervision
- Children should be supervised to ensure that they do not play with the unit.
- Never let anyone especially children push anything into the holes, slots or any other openings in the case - this could result in a fatal electric shock.

## **Service**

- To reduce the risk of electric shock, do not remove screws. The unit does not contain any user-serviceable parts. Please leave all maintenance work to qualified personnel.
- Do not open any fixed covers as this may expose dangerous voltages.

## **Maintenance**

- Ensure to unplug the unit from the power supply before cleaning.
- Do not use any type of abrasive pad or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

## **Note about LCD screen**

- The LCD screen is manufactured using high-precision technology. However, some tiny black points and/or bright points (red, blue or green in colour) may constantly appear on the LCD screen. These points are generated in the manufacturing process and are normal.

**Thank you** for purchasing your new product. We recommend that you spend some time reading this instruction manual in order that you fully understand all the operational features it offers. You will also find some hints and tips to help you resolve any issues.


Read all the safety instructions carefully before use and keep this instruction manual for future reference.

# Unpacking

---

Remove all items from the packaging. Retain the packaging. If you dispose of it please do so according to local regulations.

The following items are included:

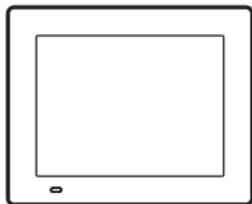

Main Unit



Power Adapter



Instruction Manual






Remote Control



USB to Mini USB cable


# Product Overview

---

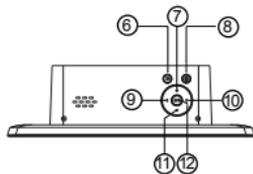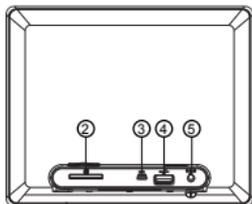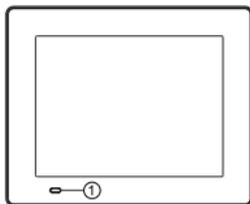

- 1.Remote window 2.SD/MMC 3.Mini USB 4.USB 5.DC IN  
6.Return 7.Down 8.Menu 9.Left 10.Right 11.Up 12. OK

# Remote Control

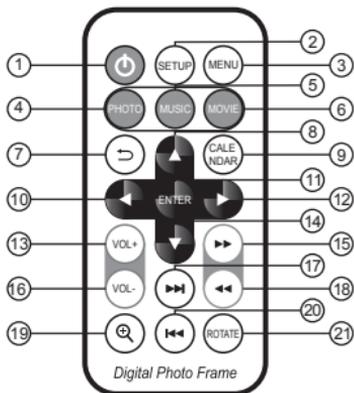


- ① **MENU** – Go directly to Main menu.
- ② **SETUP** – Go directly to Setup mode.
- ③ **POWER** – Switch On/Off.
- ④ **PHOTO** – Go directly to photo mode.
- ⑤ **MUSIC** – Go directly to music mode.
- ⑥ **MOVIE** – Go directly to movie mode.
- ⑦ **RETURN** – Return to upper page.
- ⑧ **▲** – Functional selection button from the bottom to the top cursor.
- ⑨ **CALENDAR** – Go directly to calendar mode.
- ⑩ **◀** – Functional selection button from right to left cursor.
- ⑪ **ENTER** – Press to confirm. Play/pause.
- ⑫ **▶** – Functional selection button from left to right cursor.
- ⑬ **VOL +** – Turn up the volume.
- ⑭ **▼** – Functional selection button from the top to the bottom cursor.
- ⑮ **▶▶** – To FF movie or music.
- ⑯ **VOL -** – Turn down the volume.
- ⑰ **▶▶|** – Go to choose the next file.
- ⑱ **◀◀** – To FB movie or music
- ⑲ **ZOOM** – In pause state of single picture mode, press to magnify picture display size.
- ⑳ **|◀◀** – Go to choose the pre file
- ㉑ **ROTATE** – In pause state of single picture mode, press to revolve the picture 90° in clockwise every time

# Preparations

## Connecting to the Mains Power


1. Connect the supplied mains adapter to the unit, and then plug into the mains socket.
2. Long press the button **RETURN** to switch the unit on/off.

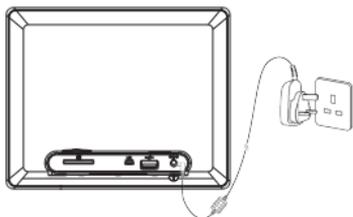

## Inserting a Memory Card / USB Device

The unit can play picture、music、Video (Refer to Specifications for the detail of supported formats).

If files in other formats are played, please use your computer to convert the images to a readable format.

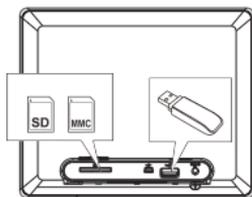

## Note:

1. The unit can play picture、music、video in USB device or memory card.
2. If your USB device or memory card is loaded with images but do not display, the format of your USB device or memory card might not be compatible with the unit.
3. This unit supports USB versions 1.1 and 2.0.
4. The unit can support USB devices and memory cards with up to 32GB of memory.
5. The unit may not be compatible with all USB devices and memory cards, this is not an indication of a problem with the unit.

## Selecting the Memory Device

The unit can only display one memory device's contents at a time. If more than one memory device is connected, select the desired memory device to be displayed by pressing **▼▲** in the memory device screen.

When a memory device is inserted into the unit, the contents will be automatically displayed according to the Display Mode selected in Setting.

1. Press **MENU** to enter the main menu.
2. Press **▼▲** to select the desired memory device, then press **OK** to confirm.




# Photo Play

## Viewing Thumbnails

In Photo screen, the photos on the selected memory device can be displayed on the screen as thumbnails.

1. Press ◀▶ to select  Photo on the main menu and press **ENTER** or press **PHOTO** directly on the remote control to start slideshow, press **MENU** to access to thumbnail mode.
2. The files/folders are displayed on the screen as playlist.
3. Use ◀▲▶ to choose the picture you want to display, press **OK** to confirm.
4. Press **RETURN** to return or press **MENU** to exit to the main menu.

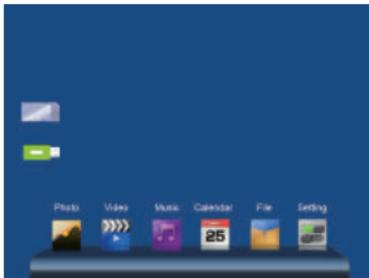

## Playing a Slideshow

In thumbnails screen, select a photo and then press **OK** to start a slideshow from the current photo.

1. To pause the slideshow and view a single photo, press **OK** . To resume the slideshow, press **OK** again.
2. Press **RETURN** to exit the slideshow and view the photos in thumbnails. While in pause mode:
3. To skip to previous or next photo, press ◀▲▶.
4. Press **RETURN** to return or press **MENU** to exit to the main menu.

During slideshow, press **OK** to enter the single picture mode, press **ZOOM** to magnify picture display size, press **ROTATE** to revolve the picture 90° in clockwise every time, press **OK** to finish operate. select picture with ◀▲▶.

Note: The slide show is with background music if there is any music files.


# Video Play

1. Press ◀▶ to select  **VIDEO** on the main menu and press **OK** to access the video mode. or press **VIDEO** directly on the remote control to play the first Video.
2. Press **RETURN** to enter the playlist.
3. Press ▼▲ to select the Video from the playlist, press **OK** to confirm.
4. Press **VOL+/-** to turn up/ down the volume.
5. Long press ◀▶ to fast backward and Fast Forward.
6. Press **RETURN** to return or press **MENU** to exit to the main menu.



# Music Play


- Press ◀▶ to select  **MUSIC** on the main menu and press **OK** to access the music mode, or press **MUSIC** directly on the remote control. The first music will play automatically by press **OK** key. Press **RETURN** to enter the playlist.
2. Press ▼▲ to select the video from the playlist, press **OK** to confirm.
  3. Press **VOL+/-** to turn up/ down the volume..
  5. Press **RETURN** to return or press **MENU** to exit to the main menu.

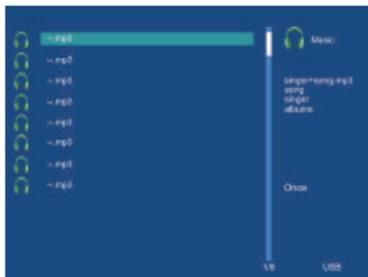

# Calendar


Press ◀▶ to select  Calendar on the main menu and press **OK** to confirm. or press **CALENDAR** directly on the remote control to enter Calendar interface.

1. Display will show time / calendar with photo slideshow.
2. Press ▲▼ to select next/previous month.
3. Press ◀▶ to select next/previous photo.
4. Press **RETURN** to return or press **MENU** to exit to the main menu.

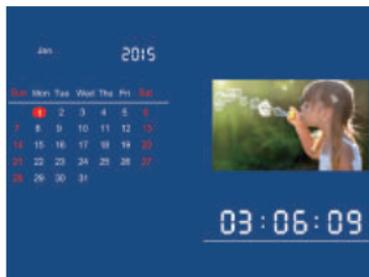

# File Manager




1. Press ◀▶ to select  File on the main menu and press **OK** to confirm to enter to the File Manager. In this mode, you can browse all the picture files and folders in the memory card or the built-in Memory.

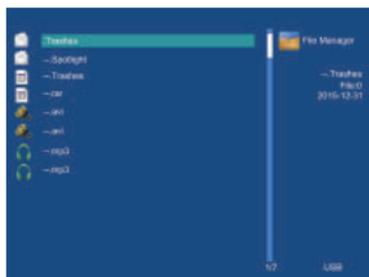

## Copy/Delete Function

1. In filelist mode of file, use ◀▶ to highlight the file you want to copy to built-in memory, press ▶ to enter Copy interface, use ▼▲ to select Copy to internal, press **OK** to confirm.

- In filelist I mode of Built-in memory, use ◀▶ to highlight the file you want to delete, press ▶ to enter Delete interface, use ▼▲ to select Delete files, press **OK** to confirm.

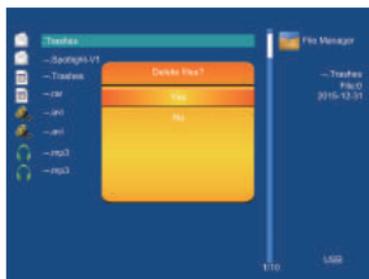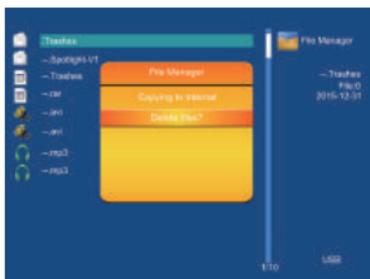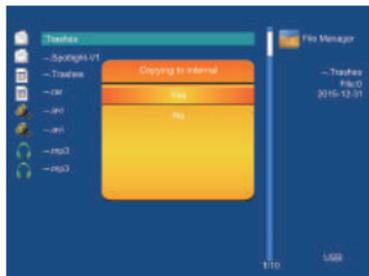


**Note:** Support Copy files from Card/USB to memory and delete files in the built in memory and cards.

## Setting

The setting screen lets you customise and configure your unit.

- Press ◀▶ to select Setting on the main menu and press **OK** to access to Setup interface.
- Press ▼▲ to select the item you want to set up.
- Press **OK** to show the sub menu, select items with ◀▶, then press **OK** to confirm.
- Press **RETURN** to return or press **MENU** to exit to the main menu.

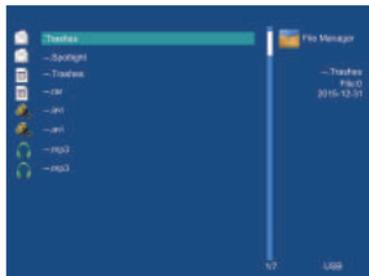

<b>Photo Setup</b>	
Display Mode	Select initial display mode.
Music	Select Background music Open or Close.
Display Ratio	Select the aspect ratio of the viewing screen.
Slideshow Duration	Select interval time for slideshow.
Slideshow Repeat	Select a repeat mode. Single repeat mode is only applicable for Single window slide mode.
Slideshow Effect	Select the style of photo transition while playing a slideshow.
<b>Calendar Setup</b>	
Display Mode	Monthly Calendar, Calender, Clock.
Date	Set the date.
Clock Mode	12-hour, 24-hour.
Clock Time	Set the time.
Alarm Status	On/Off.
Alarm Time	Set the alarm time.
Alarm Frequency	Mon.to.Fri/Weekend/Once/Everyday.
<b>Video Setup</b>	
Display Mode	Full Screen/Original Size.
Play Mode	Repeat/Random/Once.
<b>Music Setup</b>	
Play Mode	Repeat/Random/Once.
Show Spectrum	On/Off.
<b>System Setup</b>	
Language	Select the system display language.
Brightness	Adjust the display brightness.
Contrast	Adjust the display contrast.
Saturation	Adjust the display saturation.
Power On	Enable/Disable auto power on.
Auto Boot Time	Set a timer on.
Power Off	Enable/Disable auto power off.

Auto Shut Time	Set a timer off.
Auto-Power Frequency	Select the frequency for unit wake up.
Volume	Set the volume size.
Reset Default Setting	Select to reset all settings to default.
Version	Show the firmware version
System Upgrade	Upgrade system firmware

## Maintenance

---

### Cleaning the Unit

- Ensure the unit is fully unplugged from the mains socket before cleaning.
- To clean the unit, wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray aerosol at or near the unit.

## Hints and Tips

---

If you have problems with your player, please consult both this guide and manual. If you need further assistance, please contact Technical Support.

- No power:  
Please check whether the plug is inserted correctly.
- Remote control no function:  
Please check whether the battery has power (the battery can be used for half a year in normal conditions). Replace with new battery if necessary.
- Can not read the CARD or USB:  
Please confirm whether there is storage in the card or USB device. Empty devices cannot be read.
- Can not play the file:  
Please confirm if the file format is compatible with the player.

- Display too bright or too dark:  
Please adjust the brightness or contrast in the setup menu.
- The color is light or no color:  
Please adjust the color and contrast setup.
- No sound:  
Please check whether the volume is correct and the player is not in Mute mode.

## Specifications

Model	7" Slimline
<b>Power</b>	
Power Supply	Input: AC 100-240V ~50/60Hz 0.5A Output: DC 5V 1.0A
<b>Feature</b>	
Display	Digital LCD, TFT
Panel Size	7 inch
Aspect Ratio	4:3
Contrast	400:1
Brightness	200 cd/m <sup>2</sup>
Resolution	800x600 pixels
Connectivity	Mini USBx1, USB 2.0 x 1, SD Card Reader x 1,
Support Memory card	SD, MMC
Support picture format	JPEG
Support music format	MP3
Support video format	MPEG1/2/4, MOTION-JPEG
Dimension	187mm(W)x152(D)mmx53mm(H)
Net Weight	0.386KG